

INSTALLATION INSTRUCTIONS FOR XLERATOR® HAND DRYER

FOR PROPER ELECTRICAL CONNECTIONS, CHECK YOUR LOCAL BUILDING CODES. YOUR UNIT MUST BE INSTALLED BY A QUALIFIED, LICENSED ELECTRICIAN.


Suggested Mtg. Heights from floor to bottom of dryer

Men's	45" (114 cm)
Ladies'	43" (109 cm)
Teenagers'	41" (104 cm)
Sm. Children	35" (89 cm)
Handicapped	37" (94 cm)

IF MOUNTING OVER COUNTERTOP, DISTANCE FROM COUNTER TO DRYER MUST BE 15" (381mm) **MINIMUM**

Recommended Fastener

Masonry Wall	1/2" expansion sleeve with 1/4" lag bolt
Hollow Wall	1/4" wing type through bolt
Wooden Wall	1/4" lag screw with washer

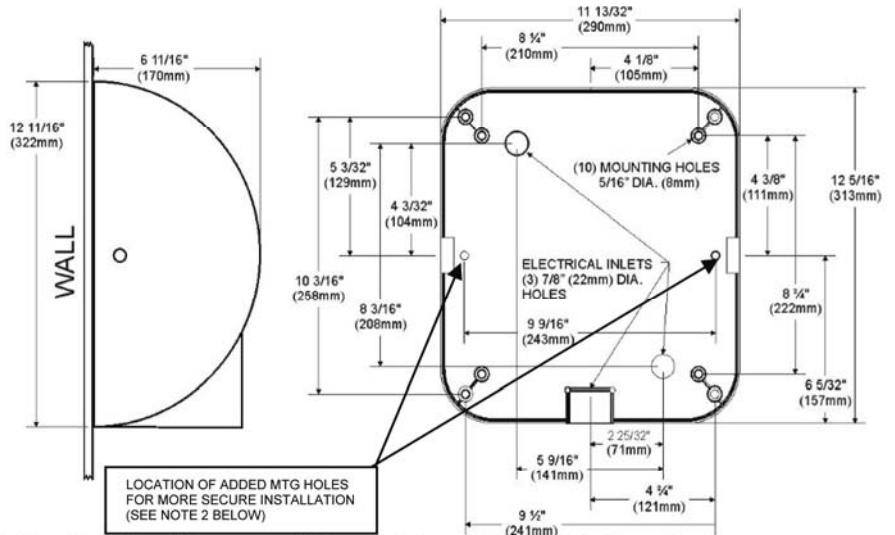

LOCATION OF ADDED MTG HOLES FOR MORE SECURE INSTALLATION (SEE NOTE 2 BELOW)

1. Remove cover of dryer by unscrewing two tamper-proof bolts from the sides of the cover with the special wrench provided with each unit.
2. Attach wall plate at the four corners to smooth wall. In locations where vandalism is a concern, use the two additional mounting holes shown. Remove control assembly to access right side mounting hole. Attach with the recommended type of fastener (see above).
3. Connect a 110/120V dryer to a 15 Amp. branch circuit using at least #12 GA copper wire. (Do not exceed a 20 Amp. branch circuit) Connect a 208, 220/240V or 277V dryer to **no more than** a 15 Amp. branch circuit using at least a #14 GA copper wire. Attach lines to terminals as indicated by the schematic inside dryer cover. Be sure that an equipment ground wire is securely fastened to green ground screw on base plate. For runs over 50 feet or for multiple installations, increase the size of the wire used. Dryers located in shower rooms or other wet locations should be installed with circuits protected by ground fault interrupter(s) or as local codes require.
4. In multiple installations, before replacing cover, check the Serial Number marked inside the dryer to be sure it matches the Serial Number marked on the label at the bottom of cover. **PLEASE DO NOT SWITCH COVERS. Do not forget to leave the special TAMPER PROOF WRENCH with the owner.**

INSTALLATION NOTE: If the dryer will not turn on, stays on or stops working, it may be mounted too close to a counter or object. Turn off the power to dryer for 10 seconds and then reapply power. If dryer will start, then turn off again, relocate the object or remount dryer. If this is not possible, adjust the range of the sensor by turning the potentiometer on the control board, clockwise to decrease sensor range. Please call the factory at **1-800-255-9235** and one of our trained technicians will be happy to assist you.

NOTE: Upon completing installation and checking for proper operation, it is **highly** recommended that a bead of **silicone sealant** be placed around the outside of the cover at the wall to protect dryer from internal corrosion caused by wash water and cleaning solutions

PARTS LIST FOR XLERATOR DRYER

REF NO.	DESCRIPTION
XL 1	Cover (includes Nameplate)
XL 2	Nameplate
XL 3	Tamper-proof Bolt
XL 4	Tamper-proof Wrench
XL 5	Air Outlet (includes gasket & screws)
XL 6	Terminal Block (includes screws)
XL 7	Control Assembly & Sensor
XL 8	Heating Element Assembly
XL 9	Motor Assembly (includes gaskets & wire harness)
XL 10	Wall Plate Assembly (includes cover mtg. brackets)
XL 11	Cover Mounting Brackets
XL 12	Housing Grommet
XL 13	Housing Retainer
XL 14	Recess Kit (for ADA)
XL 15	Optics Assembly (Sensor)

NOTE: Model, Serial Number and Voltage of the dryer **MUST BE** included when ordering parts.

